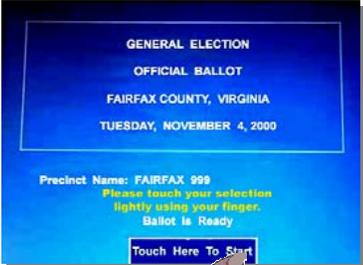
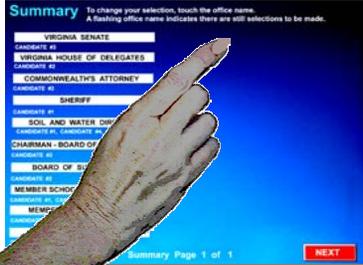
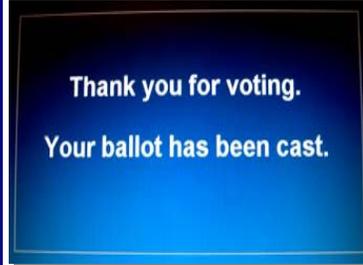


# WINvote™ VOTING MACHINE INSTRUCTIONS

| <b>Step 1:</b>  | <b>Step 2:</b>  | <b>Step 3:</b>   | <b>Step 4:</b>  | <b>Step 5:</b>   |
|---|---|--|---|--|
| <b>START</b>  | <b>MAKE YOUR SELECTION</b>  | <b>REVIEW YOUR VOTES ON SUMMARY PAGE</b>   | <b>CAST YOUR VOTE</b>   | <b>VOTE CONFIRMATION</b>   |
|   <p>An Election Officer will insert a ballot card into the WINvote™ voting machine to activate the ballot.</p> <p><b>LIGHTLY TOUCH</b> the <b>“Touch Here To Start”</b> box, which is located at the bottom center of the screen, to begin voting.</p> <div style="background-color: yellow; padding: 5px; border: 1px solid black; margin-top: 10px;"> <p><b>PLEASE INFORM THE ELECTION OFFICER IF YOU NEED ASSISTANCE VOTING.</b></p> </div> |  <p>To make your selection, <b>LIGHTLY touch</b> the <b>candidate’s name</b> or <b>answer</b>.</p> <p>A red “✓” will appear and the box with the candidate’s name or answer in it will be highlighted in red.</p> <p><b>To change or cancel your selection, LIGHTLY touch the box again.</b></p> <p><b>LIGHTLY touch NEXT</b> which is located in the lower right-hand side of the screen, to move to the next page of the ballot.</p> |  <p>You have two options:</p> <p>If a box is flashing, there are still choices to be made. <b>LIGHTLY touch the office title or question to return to it and make a selection, then LIGHTLY touch RETURN</b>, which is located in the lower right-hand side of the screen, to continue.</p> <p style="text-align: center;"><b>OR</b></p> <p><b>LIGHTLY touch NEXT</b>, which is located in the lower right-hand side of the screen if you are satisfied with your selections.</p> <div style="background-color: yellow; padding: 5px; border: 1px solid black; margin-top: 10px;"> <p><b>You do not have to vote for everything on the ballot. It is your right to leave a box blank.</b></p> </div> |  <p>You have two options:</p> <p><b>To cast your vote, LIGHTLY touch the VOTE button.</b></p> <p style="text-align: center;"><b>OR</b></p> <p><b>To make changes, LIGHTLY touch the Back button</b>, which is located in the lower left-hand side of the screen.</p> <div style="background-color: yellow; padding: 5px; border: 1px solid black; margin-top: 10px;"> <p><b>NOTE: once you “cast” your ballot, you cannot make any changes OR vote again.</b></p> </div> |  <p>You will see this screen to indicate your votes have been recorded.</p> <p>This screen will appear only for a few seconds.</p> <p>You may now leave the voting booth.</p> <p style="text-align: center;"><b>Congratulations!</b><br/><b>You have just voted in Fairfax County using the new WINvote™ Voting System !</b></p> <div style="text-align: center; margin-top: 20px;">  </div> |