


Fairfax County Courts
Courtroom Technology Office

Courtroom Technology Management System



Attorney Guide
Version 2.0

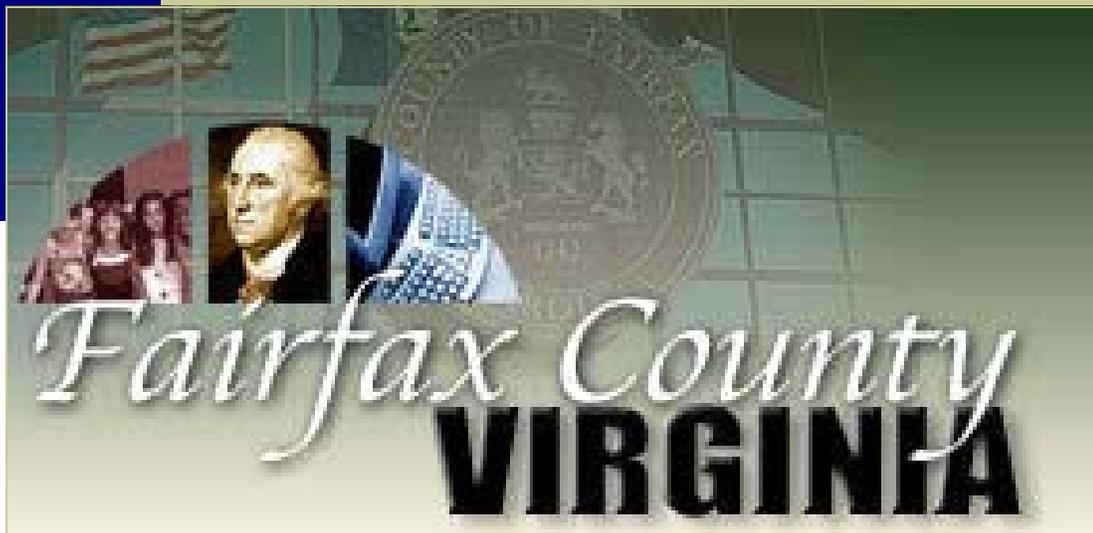

Attorney Guide

Version 2.0

Revised Sep 1, 2009

**Fairfax County Courts /
Fairfax County Department of Information Technology**

**Courtroom Technology Office
4110 Chain Bridge Road, Room 433
Fairfax, VA 22030
703.246.2770
www.fairfaxcounty.gov/courts/crto**

ACKNOWLEDGEMENTS

The Courts would like to express appreciation to the following for their contributions to the development of this document:

**Fairfax Bar Association
Technology Committee
4110 Chain Bridge Road, Room 215
Fairfax, VA 22030
703.246.2740
www.fairfaxbar.org**

**System Installation & Integration
Professional Products, Inc.
9116 Gaither Road
Gaithersburg, MD 20877
240.864.4000
www.professionalproducts.com**

**Sensei Enterprises
3975 University Drive, Suite 225
Fairfax, VA 22030
703.359.0700
www.senseient.com**

Contents

Introduction	5
About This Manual	5
System Overview	6
Reserving a Courtroom	8
Evidence Presentation Sources	10
The Touchpanel Controls	13
Summary of Touchpanel Operations.....	13
Microphones.....	16
Getting Started	17
Judge Controls.....	18
Evidence Screen Function Buttons	18
Attorney Controls	23
The Wireless Touchpanel	23
Document Camera	25
Settings and Defaults	27
Annotation	28
System & Technical Specifications.....	29
On The Horizon.....	30

Introduction

Introduction

The Courtroom Technology Management System (CTMS) provides comprehensive audio and video support to all of the technology-equipped Courtrooms, as well as the Adult Detention Center and the Master Control Room.

Management of the courtroom technology is provided by a Crestron remote control system with interactive touchpanels. The system is programmed to allow the Judge and the Court Clerk to have complete control over all functions of the system. This is accomplished via duplicate 17-inch touchpanels located on their respective desktops.

A separate, smaller and portable wireless control panel is available to attorneys with less functionality and controls than the Judge or Clerk.

The system supports various courtroom processes such as:

- Electronic Evidence Presentation
- Remote Arraignments
- Video Teleconferencing
- Audio System Control
- Remote Witness Testimony
- Audio Teleconferencing
- Overflow Room Monitoring

About This Manual

This manual provides information to enable potential non-technical users to understand and operate the system using the Crestron control touchpanels located in the courtrooms.

The system is designed so it can be easily set up for typical usage. However, the system has many capabilities beyond those covered in this manual. For additional information or assistance, users should consult the Courtroom Technology Office (CrTO).

FAIRFAX COUNTY COURTHOUSE
Courtroom Technology Office
4110 Chain Bridge Road
Fairfax, VA 22030
703-246-2770

CrTO@fairfaxcounty.gov
www.fairfaxcounty.gov

System Overview

The Courtroom Technology Management System (CTMS) provides comprehensive audio and video support to all of the technology-equipped Courtrooms, as well as the Adult Detention Center and the Master Control Room. The system also provides access to the outside world through telephone hybrids and ISDN (Integrated Services Digital Network) codecs.

The CTMS system includes:

- State of the art fiber optic network and routing system.
- Large wall-mounted flat screen displays in each courtroom for gallery viewing.
- 17-inch touchscreen monitor with annotation capability for the witness.
- Six 17-inch monitors in the jury box plus one portable monitor for special case scenarios.
- 17-inch touchscreen monitors with annotation capability at each attorney's table and the center podium.
- 17-inch monitor at the Court Reporter's desk.
- Computer audio/video interfaces at each attorney's table, the center podium, and the witness box allowing the presentation of electronic evidence.

- Evidence cart or podium with a high resolution document camera, DVD/VCR/DV player, multi-format audio interface
- Wireless control touchpanel in all courtrooms.
- Audio system with "Mute or Talk" microphones.
- Closed circuit private and secure telephone system between the attorney and protected witness room.
- Video codecs that facilitate arraignments or video teleconferences for remote witness or secluded witness.

The core of the system is located in the Master Control Room (MCR). All locations within the Judicial Center connect to the MCR using fiber optic cables. Information is routed to and from the various locations as needed. Remote status monitoring and troubleshooting of the individual courtroom systems is also possible from the MCR. The core system components are connected to the individual courtroom systems through the fiber optic network and are controllable from the courtrooms using the Crestron touchpanel remote control system

The system is capable of sending or receiving audio and video information to and/or from any location within the facility. It can also be used to provide "Overflow Room Monitoring" when needed. Remote arraignments are also possible, as well as the presentation of remote evidence or remote witness testimony. Electronic evidence, in virtually any format, can be presented with ease without the need for additional support equipment or personnel.

Large flat screen displays for gallery



Monitor displays in the jury box



Large flat screen display (Courtroom 5J & 5E only) and 17-inch monitor at the witness stand



Reserving a Courtroom

In order to use the courtroom technology presented in this manual, you need to reserve the courtroom. Currently, only the Circuit Court and the General District Court permit courtrooms to be reserved online.

The Courtroom Technology forms can be found online in the following locations:

For the Circuit Court:

[http://www.fairfaxcounty.gov/courts/circuit/courtroom _ technology _ reservation _ form.htm](http://www.fairfaxcounty.gov/courts/circuit/courtroom_%20technology_%20reservation_%20form.htm)

For the General District Court:

[http://www.fairfaxcounty.gov/courts/gendist/courtroom _ technology _ reservation _ form.htm](http://www.fairfaxcounty.gov/courts/gendist/courtroom_%20technology_%20reservation_%20form.htm)

For the Juvenile & Domestic Relations District Court:

The Reservation form is not required as all nine (9) Juvenile Court courtrooms offer high-technology capabilities.

The two forms (General District and Circuit Court) are identical, but in their respective sections of the Court website. Make sure that you are completing the form for the proper court.

Fill out this online form completely in order to reserve a courtroom. After submitting the completed form, the IT support staff will contact you to confirm availability.

Two weeks advance notification is required for all courtroom reservations.

Users are encouraged to request courtroom reservations well in advance, as soon as trial dates are known.

If users no longer need the courtroom, they **MUST** cancel their reservations. To cancel, please contact the IT support staff via e-mail or phone. By canceling the reservation, it frees up the courtroom for others. Failure to adhere to these policies may jeopardize your ability to use these resources in the future.

Courtroom Technology Reservation Form - Fairfax County, Virginia - Mozilla Firefox

File Edit View History Bookmarks Tools Help

http://www.Fairfaxcounty.gov/courts/circuit/courtroom_technology_reservation_form.htm

Most Visited Smart Bookmarks Getting Started Latest Headlines



Home Living Here Doing Business Visiting Departments & Agencies Search Site: [] Go Advanced Search

Index

- Contacts/Directions
- About Circuit Court
- Circuit Court Judges
- Frequently Asked Questions
- Holiday Schedule
- Phone Directory (PDF)

Related Links

- Our Government
- Circuit Court
- General District Court
- Juvenile and Domestic Relations Court
- Courtroom Technology Office (CrTO)

Online Services [v]

Our Government [v]

News and Events [v]

Maps, Facts & Stats [v]

State & Federal [v]

homepage > courts > circuit court > courtroom technology reservation form:

Courtroom Technology Reservation Form

The 19th Circuit Court of Virginia has multimedia evidence systems available for court use. The systems enable attorneys to present evidence simultaneously to everyone in the courtroom through a network of monitors and flat screen televisions or solely with the use of a television and DVD/VCR. For more information about courtroom technology, please visit the [Courtroom Technology Office \(CrTO\)](#) website.

Orientation prior to use of the equipment is strongly encouraged. Please contact the Circuit Court IT Department at (703) 246-2366 to set up an appointment. If you need to bring your own equipment to the courthouse, please call (703) 246-3279 to clear it with security.

Attorneys interested in reserving equipment must fill out and submit the form below, all fields are required. At least two weeks notification is required. The systems are available on a first-come, first-served basis. The systems are run by the attorneys, not by court staff.

Should the case settle or be continued it is the responsibility of the attorney to submit a cancellation form. A new reservation form will be required for the new continued date.

Failure to adhere to these policies may jeopardize future use of courtroom technology.

Printer Friendly [A] [A] [A] Text Size [Text Only]

Equipment Type

Case Details

Request Type: Reservation Cancellation

Case Number: []
ex: CL-2009-9999999, F9999999

Case Style: [] vs []

Trial Date: []

Trial Length: []

Requestor Information

Attorney Name: []

Party: Plaintiff Defendant

Phone Number: []

Email Address: []

Please describe what will you will be presenting for your case below:

High-Tech Courtroom

- Remote Videoconferencing
- Document camera - Magnify portions of a document or a small piece of physical evidence
- Show documents, images or slideshow presentations from an attorney-provided laptop
- Display videotape or DVD evidence
- Play audiotape evidence

Video Equipment

- Television
- DVD/VCR

[]

Submit Clear

DIGITAL COUNTIES SURVEY WINNER

Contact Us: [General \(Office of Public Affairs\)](#) | [Technical \(Web Administrator\)](#) | [Directed Inquiries \(County Agencies\)](#)
 Phone: [County Main Number](#) - 703-FAIRFAX (703-324-7329), TTY 711 | [County Phone Listing](#)

[Accessibility](#) | [Awards](#) | [Mobile](#) | [Using this Site](#) | [Web Disclaimer](#) & [Privacy Policy](#)
 Official site of the County of Fairfax, Virginia, © Copyright 2009

BEST OF THE WEB 2007 WINNER

 **Survey: Provide Feedback About the Web Site, Including This Page**

Evidence Presentation Sources

Electronic evidence, in both digital and analog formats, have become commonplace today in courtrooms. How to properly present the evidence and effectively use the technology during a courtroom trial requires knowledge, experience and confidence to understand and optimize the capabilities provided by the Courtroom Technology Management System.

Using the touchpanel, users can select from multiple evidence sources.

An evidence source can be considered any medium through which evidence will be displayed, such as a laptop, projector or DVD player.

Court-Provided Equipment and Connectivity

- DVD/CD player
- VHS player
- Document Camera
- Video Connection (IT assistance required)
- Digital Video Connection (digital camera, camcorder, etc.)
- Multiple type audio connections (e.g. RCA, mini phono, etc.)
- Computer Audio and Video Connections at Witness, Podium and Attorney tables

User-Provided Equipment / Cables

- Laptops and computers
- Adaptors – e.g. DVI to DB15HD
- Cables - Audio Cassette decks, i-Pods etc.
- Power supplies – batteries, power adapters, converters
- Exhibits, display stands

User provided laptop




Cables



Laptop video and audio connections are provided at each of the attorney tables, podiums and witness stand. At each of the attorney tables, the necessary connectors are located within the wells at the front of the table. **Note: only one laptop at each table can be connected as an evidence source.**

*Laptop Audio/Video Connectors Located
Within Well*

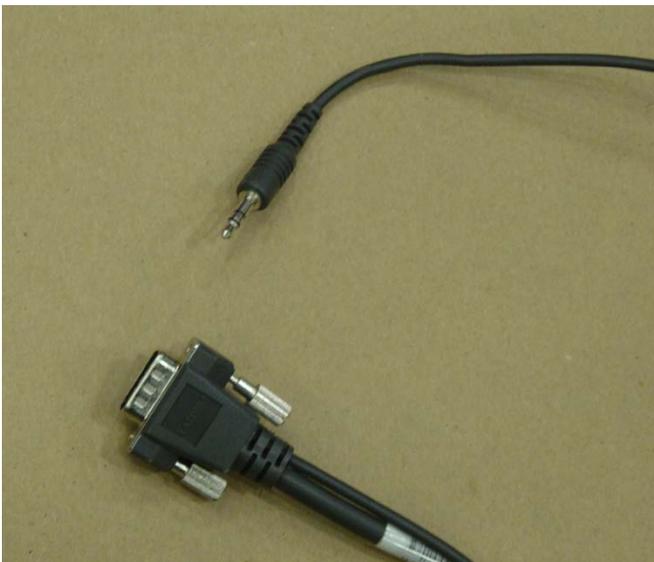

*Close up of laptop audio and video
connections*

The court provided VGA connector should be compatible with most Windows-based laptop computers. However, this connection is not compatible with Apple computers. Users who wish to use Apple computers to display their evidence must supply their own video adapter to interface with the provided VGA connection. These adapters can be purchased from your local electronics retailer.

Critical Note: Users should preset their computer display resolution to the system default setting of 1024 x 768 at 60 Hz **before** connecting to the system. If your display resolution is not set correctly prior to connecting to the system, the resulting display may be sized incorrectly with only a fraction of the screen viewable or may flicker.

Location of Power Strip at Attorney Tables



All locations have 3-prong, grounded, 15A - AC Power outlets. The podium has power connections on the evidence cart or from the floor box. The attorney tables have power strips located within the wells at the front of each table.

Touchpanel Controls

The Courtroom Technology Management System (CTMS) provides comprehensive audio and video support to all of the technology-equipped Courtrooms, as well as the Adult Detention Center and the Master Control Room.

Attorneys can easily control CTMS system functions from the podium touchpanels by simply touching the various screen buttons available on the unit's display screen. This device is located at the podium, in a charging cradle to the right of the display monitor. This device can be stationary or portable.

The system also provides the Judge and the Clerk with duplicate 17-inch touchpanel controls located on their respective desktops. Both Judge and Clerk have the ability to manage, oversee and override the attorney controls and the attorney touchpanels will reflect the subsequent changes.

Summary of Touchpanel Operations

To power the touchpanel handheld unit on or off, use the power button located on the side of the device.



Touchpanel Display Screen



Using the touchpanel users can:

- Select evidence sources, including:
 - DVD/VCR/DV player
 - Document camera
 - Multi-format audio interface
 - Computers
 - Remote evidence
 - Remote Witness

- Preview these sources and request that they be published by the Judge or Clerk to wall-mounted plasma displays for the gallery, multiple monitors for the jury, or an annotation capable monitor for the witness. You can also route evidence from the courtroom to a secluded witness. (The Judge or Clerk control the publishing of information to the designated destination displays)

All of the evidence sources are located at the Podium, with only the Computer source available at the attorney's tables.

All of the audio and video inputs are located in the Podium or in an adjacent cabinet, depending on the courtroom.



Unless you're using a laptop, this is the location where you will insert DVDs, VHS tapes and connect audio or video devices to be used as evidence sources.

Publishing an evidence source makes that source viewable, displayed on the screens that are enabled for publishing to, which is controlled by the Judge or Clerk.



The Judge and Clerk also have the ability to:

- Adjust the volume or mute all microphones in the courtroom
- Initiate or receive audio or video teleconferences
- Adjust the audio level of any electronic evidence source
- Allow "Overflow Room Monitoring" between courtrooms
- Set up remote arraignments
- Log in and start up, or shut down the system
- Publish audio sources, for which there is no preview - the audio will immediately start playing

Microphones

There are a number of microphones located throughout the courtroom. There should be one at each attorney table, podium, witness stand, Judge and Clerk, and Jury box.

Attorney Table Microphone



Power Button For Microphones



Microphones Over Jury Box



It should be assumed that all microphones are powered on. To turn a microphone off, press the button located at the base of the device. When powered on, the green light will be lit up. When powered off, the green light will be off. Podium mikes can only be muted by the Judge or Clerk.

Details for these operations are provided in the following sections.

Getting Started

When the system is shut down your screen will be black.

Only the Judge or Clerk can log in and start up the system.

Attorneys are not responsible for turning the system on or off.

Note: Access codes are only available to court staff.

Please wait for the system to complete its start up sequence before continuing. This should take approximately 1 minute.

Judge Controls

Evidence Screen Function Buttons

Evidence Sources

When an evidence source is selected, by default, it will only appear on the screen displays for the Judge, Clerk, court reporter, litigator's podium and all attorney tables with displays. By default, this evidence is not automatically displayed to the witness, jurors, gallery or protected witness.

The evidence will appear in the preview windows at the bottom of the judge's screen. The Judge and Clerk retain control of the system and what can be published (displayed).

Upon approval of the judge, the evidence can be published to any or all of the multiple flat-screen displays available to the witness, the jury, and the Gallery. It can also be published to the protected witness.

Should the Judge not need to preview the evidence, the Judge or Clerk can change the default setting to "auto-publish," thereby allowing all submitted evidence to be displayed to all display devices that have been selected.

Attorneys should be aware of this "auto-publish" feature and the ability to inadvertently publish evidence prior to the intended time.

Evidence Sources		
Document Camera*	Podium PC	Judge PC
DVD*	Witness PC	Clerk PC
VCR*	Plaintiff 1 PC	REPORTER PLAYBACK
Audio Source	Defense 1 PC	Room Monitor
DV	Plaintiff 2 PC	Remote Evidence
Signal Test	Defense 2 PC	Remote Witness

Available Evidence Sources

Clear Annotation

The display monitors located at the podium, the witness box, and each attorney table is annotation-capable. The annotated evidence will appear on all monitors and displays where the evidence is published or viewable. You can use your finger on the display or the provided stylus to draw annotations on the monitor. Pressing the Clear Annotation button (lower left on display) will erase the annotation from all locations.

Besides clearing all annotations, there are other annotation options directly available to the user located on the display monitors.

By touching the upper left hand corner of the display, a user may change the color of the annotation markings. This setting changes the current color for all annotation input locations. If a user requires a certain annotation color, they will need to change it to the specific color, prior to annotating.

*Upper Left Hand Corner Annotation Option
– Change Color*



By touching the upper right hand corner of the display, a user may undo the last mark made. This action will undue the last mark, regardless of who made it.

*Upper Right Hand Corner Annotation
Option – Undo Last Mark*



By touching the lower left hand corner of the display, a user may clear or erase all annotations on the display.

*Lower Left Hand Corner Annotation Option
– Erase All*



Be cautious when using the displays located on the attorney tables to make annotations. The lower left hand corner of the display is in a prime position to be accidentally pressed when reaching for a document or leaning over to talk to a party or co-counsel.

Print

The system is equipped with a color printer controlled by the Judge or Clerk. Pressing the Print button will send a copy of the selected evidence, including any annotations, to the printer located at the Court Clerk's desk. **Only the Judge or Clerk panels have print functions.**

System Mutes

Pressing the Red **STOP** (System Mute) button will instantly mute all microphones and unpublish any audio or video evidence source. Pressing the STOP button again will unmute the microphones, but will *not* republish the evidence.


Sidebar Mutes


There are two sidebar selections available to the Judge. The button on the left is "*sidebar with noise masking*" and the button on the right is "*sidebar without noise masking*". Pressing either of these buttons will mute all microphones and audio sources except for the sidebar mic which is used for recording only. Pressing it again will return the system to its previous state. Noise masking is "white noise" sent to all areas of the courtroom except the bench to help prevent the sidebar conversation from being heard by anyone other than the Judge and the attorneys.

Evidence Volume

Only the Judge or Clerk can control volume levels. To adjust the volume of any evidence source or an audio or video teleconference, including remote arraignments, simply press the Up or Down buttons in the Evidence Volume section. The red bar below the buttons indicates its level status. There is a separate volume control for a protected witness.

Clear Annotation, Print, Stop (System Mute), Side Mute and Evidence Volume Controls Status Window

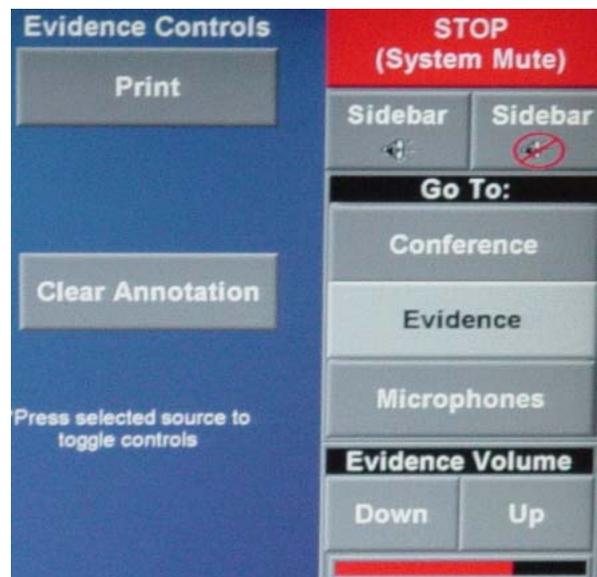

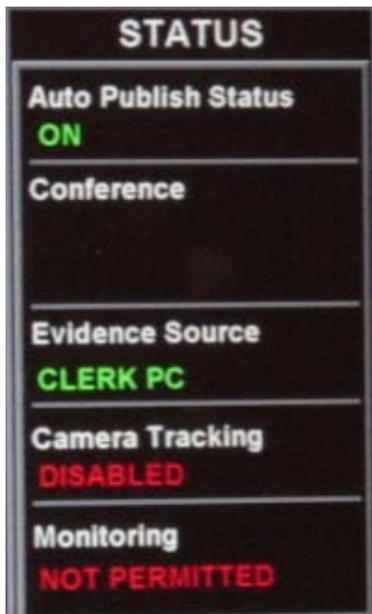


Options

The Options screen gives the Judge or Clerk access to some of the functions that are not used on a daily basis, such as allowing room monitoring, turning on the Auto Publish function or powering on the witness big screen display.

Other features available on this screen include selecting the default start up screen, as well as saving and recalling system defaults. To exit this screen, press the Return button and the user will “go back” to the previous screen.


Status Windows

The Status Window allows the Judge or Clerk to monitor the current state of various functions of the system. The Status Window allows the Judge or Clerk to see whether or not the Auto Publish or Camera Tracking functions are turned on; what evidence source is currently selected; if room monitoring is allowed; or if a codec has been reserved for a video-conference.

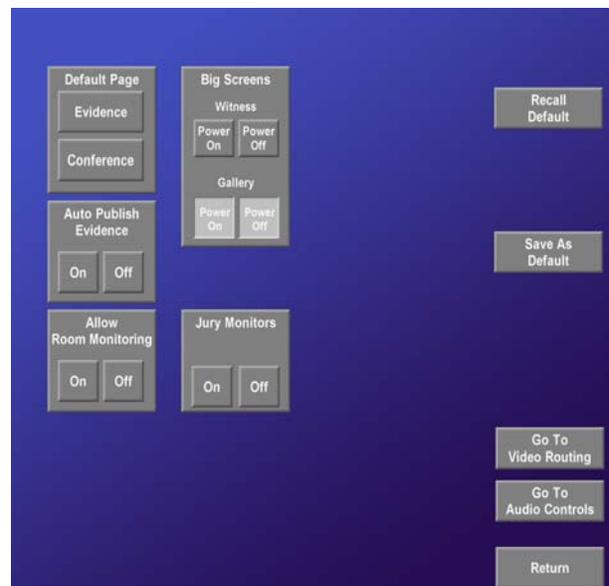

Shut Down

To turn the system off, press the Shut Down button. A confirmation window will appear.

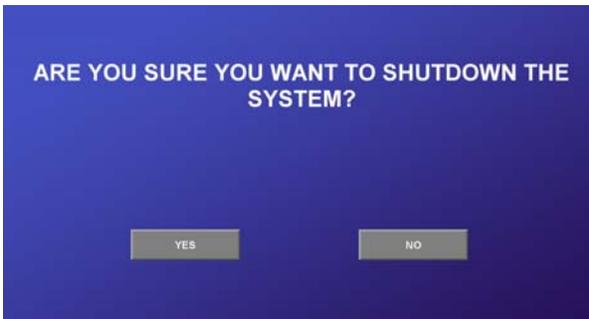

Following the prompt, press YES to continue to shut down or NO if you want to keep the system on and return to the previous screen.

Attorney Controls

The Wireless Touchpanel

The system provides a Wireless Touchpanel located on the podium or portable evidence cart allowing the user to control the various evidence presentation devices. This touchpanel can be operated while attached to its charger/stand or it can be used remotely by detaching it from the charger/stand.


Just like most wireless devices that use rechargeable batteries, they don't last very long. This wireless device is no different. A user can operate this device for up to an hour before the device will need to be recharged. To be safe, when not in use place it back on its charger/stand.

The screenshot to the right shows the default screen. To make your selection, simply press the button of the evidence source you need to use.

When you select any of the available evidence sources, you will automatically see the pop-up window with its associated controls as shown in the screenshot below.




Document Camera Controls

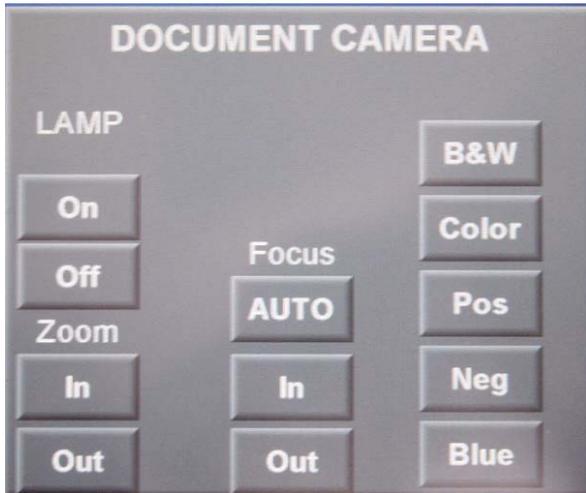


Pressing the Computers button will bring up the additional buttons shown below allowing the user to select any of the computer audio video interfaces located at the center podium and all of the attorney tables


DVD Controls

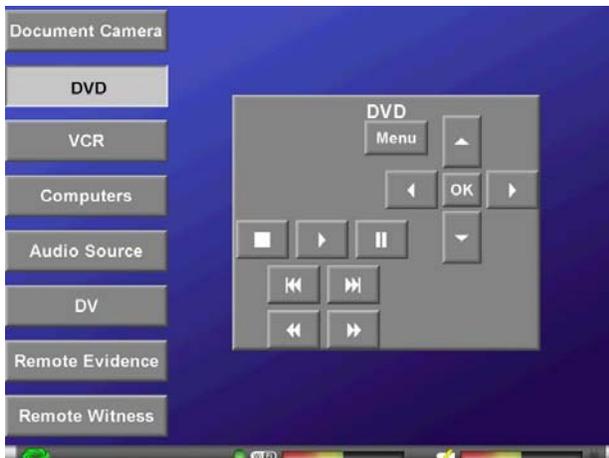

Computer Controls

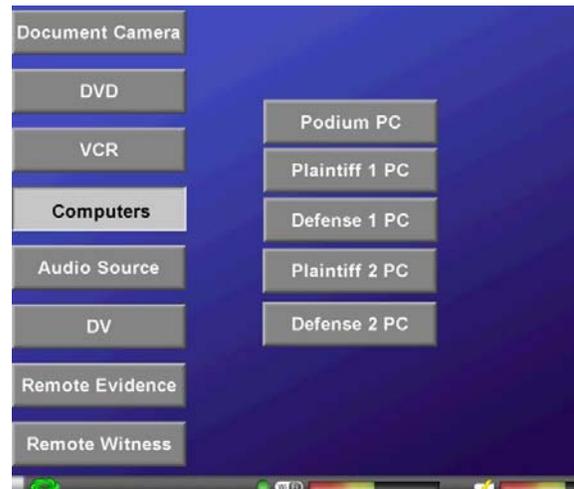

VCR Controls

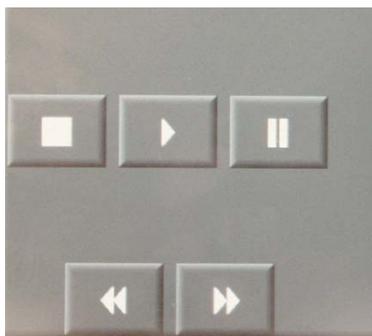

All of the evidence sources available on the Wireless Touchpanel can be controlled locally, as well as by the Judge and the Clerk's touchpanels. ***Each evidence source change causes the Judge and Clerk preview video to change as well!***

Document Camera

The document camera is located next to the Podium, and can be used to display exhibits on the LCD displays located at the attorney's tables, Podium, Judge and Clerk's desk, witness stand, and both the jury and gallery. The document camera display bed is large enough to fit a standard

8 ½" x 11" sheet of paper. For larger exhibits, an easel may be used to hold the exhibit, with the camera turned towards the easel. Using an easel, the largest exhibit size that can be displayed within a single screen is 16" x 20". The camera lens can be tilted by moving the rotating camera on top of the extended stand.

Document Camera In Collapsed Position, Next To Podium and Wireless Touch Panel



To use the device, you must first extend the document camera by pulling the camera to an upright position.

Document Camera Extended




To power on the document camera lamp, you may press the power button located directly on the document camera or using the Wireless Touch Panel, press the "On" button for the Document Camera. Additionally, the document camera lamp may be powered on or off from both the document camera or the Wireless Touch Panel.

Power Button (on Left) and Lamp On/Off Button (on Right) Located On The Document Camera



Wireless Touch Panel Location To Control Document Camera Settings

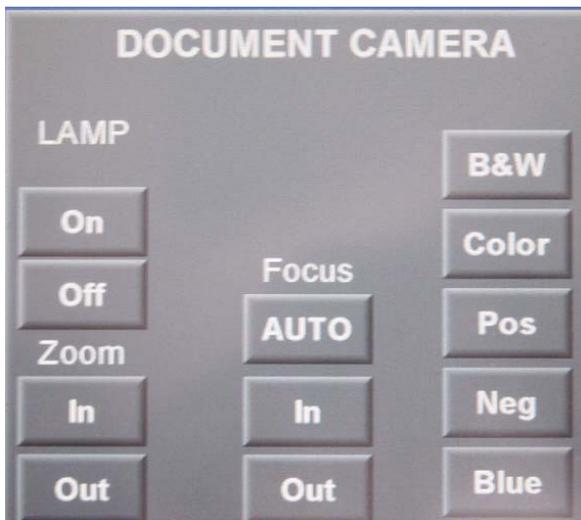

Using the Wireless Touch Panel or the controls directly located on the document camera, you may zoom the camera in and out, control the focus of the picture, and set the display type to Black and White, Color, Positive, Negative and Blue. Setting the display type to Positive, Negative or Blue will be useful when displaying images such as X-Rays or picture negatives. In most instances, the document camera will auto-focus the displayed image. If adjustment is necessary, use the focus controls to achieve the desired focus setting.

Document Camera Controls Located Directly On Top Of Camera



Settings and Defaults

Laptop computers have become commonplace in most courtrooms. Users should be aware that any presentation that can be viewed from a laptop is capable of being displayed in the courtroom. For optimum resolution and effective annotation, users should set laptop computer screen devices to the following display setting:

1024 x 768 standard resolution, 60Hz Refresh Rate

Windows 2000 and earlier operating systems are not supported.

To change the display resolution on your laptop computer, perform the following steps:

Windows XP-based computer:

- (a) Right-click on the Desktop and select 'Properties' from the drop-down menu
- (b) Click on the 'Settings' tab
- (c) Adjust the 'Screen Resolution' slider to the 1024x768 setting
- (d) Click the 'Advanced' button
- (e) Select the 'Monitor' tab
- (f) Select '60 Hertz' in the list for the Screen refresh rate:
- (g) Click 'OK'
- (h) Click 'OK' again for changes to take effect

Windows Vista-based computer:

- (a) Right-click on the Desktop and select 'Personalize' from the drop-down menu
- (b) Click on the Display Settings link, towards the bottom of the window
- (c) Adjust the 'Resolution' slider to the 1024x768 setting
- (d) Click the 'Advanced Settings' button
- (e) Click the 'Monitor' tab
- (f) Select '60 Hertz' in the list for the Screen refresh rate:
- (g) Click 'OK'
- (h) Click 'OK' for the changes to take effect

Windows 7-based computer:

- (a) Right-click on the Desktop and select 'Screen Resolution' from the drop-down menu
- (b) Click the 'Resolution' box to pull down the slider settings
- (c) Adjust the 'Resolution' slider to the 1024x768 setting
- (d) Click the 'Advanced' button
- (e) Select the 'Monitor' tab
- (f) Select '60 Hertz' in the list for the Screen refresh rate:
- (g) Click 'OK'
- (h) Click 'OK' again for changes to take effect

Macintosh-based computer:

- (a) Click on the Apple logo in the top-left menu bar
- (b) Click on the 'System Preferences' from the drop-down menu
- (c) Click on the 'Displays' option in the System Preferences window
- (d) Select the 1024x768 resolution setting
- (e) If there is an option to select the 'Refresh Rate' set it to 60 Hertz. Most Macs do not allow the user to change the 'Refresh Rate' and will default to 60 Hertz.
- (f) Exit the window

Annotation

The display monitors located at the podium, the witness box and all of the attorneys tables are annotation-capable. The annotated evidence will appear on all monitors and displays where the evidence is published or viewable. The annotated evidence also appears in the left preview window of the Judge and the Clerk's monitor; however, the Judge and Clerk do not have the ability to actually annotate. Annotating the evidence being viewed is done by simply using your fingertip or using the provided stylus to draw directly on the display monitor. By touching the appropriate corner of the screen (see labels on touchpanels) you can change the color (seven colors are available), undo the last mark, or erase all annotations. The Judge and the Court Clerk also have the ability to reset or erase the annotations. This is the only annotation function available to the Judge or Clerk.

System & Technical Specifications

Presentation Sources

Video Teleconference (VTC)

- Must be pre-arranged
- Supports Single Mode VTC (all types)
- Dual Mode VTC (Tandberg only with Natural Presenter Package)

Audio Conference

- Must be pre-arranged
- Single line phone connection into the courtroom audio system

Laptop/ Computer Connections

- Users should preset their computer to the system default resolution of 1024 x 768 before connecting to the system!
- DB15HD with 1/8" Stereo Audio
- User supplies DVI or Apple computer adaptor as necessary
- Connections available at all attorney tables, podium, witness, Judge and Clerk

RGB Capability

- Up to 1600 X 1200 (UXGA)
- Computers connected to Evidence Cart
- This location re-scales all input to 1024 X 768

Native RGB Resolution

1024 X 768, 60 hz (XGA)
All Computer connections at all locations

Document Camera

- Viewing Area 8 ½" X 11"
- Any font size can be displayed using zoom controls
- Transparencies
- X-rays using Negative, Negative/Blue and Negative B/W
- Text Enhancement
- Rotating Camera Head for other larger objects

Evidence Source

DVD (Digital Video Disc or Digital Versatile Disc)

- DVD Video (Finalized)
- Specifications
 - UDF ver 1.02 or
 - ISO9660 or Joliet
 - Single or double layered discs

CD (Compact Disc)

- Video CD
- Super Video CD
- Specifications
 - Compact Disc Specification - CD-DA
 - 2-channel 16-bit PCM encoding at a 44.1 kHz sampling /channel
 - ISO9660 or Joliet (Finalized)
 - MP3 and JPEG when finalized as ISO9660 or Joliet

VHS (Video Home System)

- S-VHS tape
- VHS tape
- Specification
 - NTSC Standard

DV (Digital Video)

- User provides cable
- Specifications
 - I-Link (Sony)
- Connector Type
 - 4 Pin Firewire or 4 pin DV

Composite Video plus Audio

- User provides cable
- Specifications
 - RCA style connectors
 - Video format is NTSC

Audio Sources (user provides cable)

- 1/8" mini stereo, 30dB gain, 50Kohm
- 1/4" un-balanced, 30dB gain, 50Kohm
- XLR – 60dB gain, 10Kohm, Max input +4dB
- RCA Line – un-balanced, 30dB gain, 50Kohm

Recording

Real Time Transcription – currently untested

(user provides equipment)

- Two independent circuits: RJ14 (6pin) connections for connection to DB9 to RJ14 transmit and receive devices. Requires court-provided RJ14 to RJ45 adaptor.

Audio Recording and Playback

(user provides equipment)


- 4 Independent channels of audio output at the Court Reporter location.
 - Line level, XLR Male
 - Channel 1 – Full courtroom audio mix
 - Channel 2 – Judge and Sidebar microphones
 - Channel 3 – Witness, Remote Witness and Interpretation
 - Channel 4 – Podium and Attorney tables
 - 1 Channel of audio input to the court system.
- Microphone level, XLR female

On The Horizon

- Wireless in the courtroom
- Automatic court recording
- Remote Interpreting
- Media Formats – Blu-Ray Disc, HD VMD disc, Digital multilayer disc, Ultra Density Optical disc, Holographic Versatile disc

Statement of Responsibility

The Court bears no responsibility for the improper or ineffective use of the courtroom technology. Users are expected to be prepared and knowledgeable when using the Courtroom Technology Management System. Formatting issues with various media devices can be problematic. Users are highly encouraged to test any equipment or resources to be used well before the actual trial date!

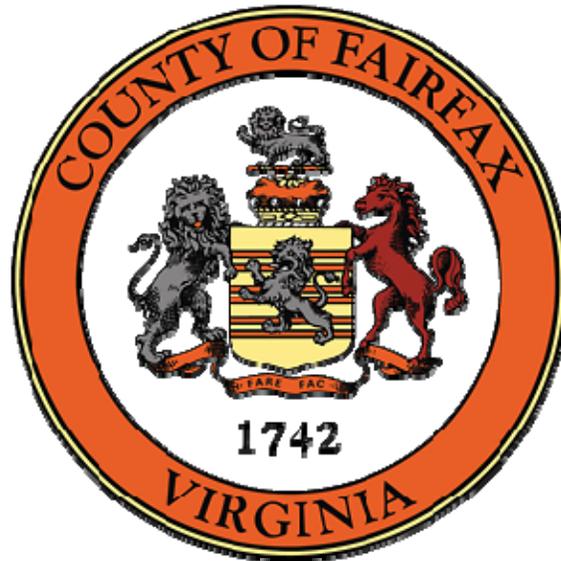

Fairfax County Courthouse
Courtroom Technology Office

4110 Chain Bridge Road, Room 433
Fairfax, Virginia 22030
703-246-2770
CrTO@fairfaxcounty.gov
www.fairfaxcounty.gov

Fairfax Bar Association

4110 Chain Bridge Road, Room 215
Fairfax, Virginia 22030
www.fairfaxbar.org

EQUAL ACCESS/SPECIAL ACCOMMODATIONS

The Fairfax County Courthouse is committed to equal access in all programs and services. Special accommodations will be provided upon request. Please call the ADA/Access coordinator at 703-246-4111, at least 10 working days in advance of the date services are needed.

ADA/Access Coordinator 703-246-4111 TTY 703-352-4139

www.fairfaxcounty.gov/courts/ada.htm

A Fairfax County, Va. publication 4/2008